# **Breath Logix Alcohol Breathalyzer**



Rapid, accurate high throughput testing



Fast cartridge change (no calibration needed)



Autonomous device with low-cost maintenance



Compact wall-mounted design suitable for many workplaces settings



Cloud connectivity and data management



Operating in two modes, straw and contactless



# **BreathLogix Workplace Series**





## Introduction

For over 10 years, Cannabix Technologies Inc. has been developing innovative breath screening devices for law enforcement and the workplace.

Breath Logix (Br-LGX-WS) workplace series is a fully automated breath alcohol screening system for employee, contractor and visitor access control. Br-LGX-WS is self-administered, non-invasive and has both contactless and direct straw modes. This product is engineered for rapid, accurate and repeatable high-volume screening in various employment settings. Its compact design, field proven alcohol sensing technology and ease of use provide long working life and exceptional subject compliance.

# **Key features**

Breath Logix offers fully integrated solutions with intuitive graphic interface in an autonomous wall-mounted unit.

The Br-LGX-WS includes an innovative pre-calibrated modular cartridge technology that allows customers and distributors to efficiently maintain calibration and servicing of their Br-LGX-WS devices.

The Br-LGX-WS cartridge technology will reduce costly and timeconsuming legacy calibration processes.





# **BreathLogix Workplace Series**

# Br-LGX-WS Alcohol Breathalyzer



Specific	Specification	
Alcohol Se	nsor	Fuel Cell with high sensitivity and wide detection range
Detection	Range	0 to 0.3 g/210 L BrAC
Accuracy		± .005 g/210 L for 0 to 0.05 g/210 L BrAC. ± 10% for 0.05 to 0.3 BrAC
Response	Time	Under 20 seconds
Recovery <sup>-</sup>	Гіте	10 seconds for negatives, under 60 seconds on positives
Display		5" capacitive touch screen
Operating	Temperature	32° - 113° F (0° - 45° C)
Power		12 Volt DC power adapter
Size		6.3" x 7" x 2.7" (16 x 17.8 x 6.8 cm)
Weight		2.2 lbs
Material		ABS plastic

#### **Features**

- RFID
- Speaker for voice commands
- Camera
- Alcohol detected not detected
- BrAC level
- Replaceable sensor cartridge
- Contactless and Straw mode

- Errors displayed when relevant
- Email and text notification
- Wi-Fi, Bluetooth, USB
- Remote management dashboard with Amazon AWS
- Calibration due displayed warnings
- Internal data storage as well as uploading to the cloud
- Daily/weekly/monthly logs backup

# **What Breath Logix offers**



#### Rapid, accurate high throughput testing

Rapid 8 seconds test time for negative tests, and 120 tests per hour. Accuracy of ± .005 g/210 L for 0 to 0.05 g/210 L BrAC. ± 10% for 0.05 to 0.3 BrAC.



#### Compact wall-mounted design suitable for many workplaces settings

Compact sleek design with multiple features engineered for many different workplaces.



#### Fast cartridge change (no calibration needed)

Pre-calibrated modular cartridge technology. Less than 10 seconds cartridge replacement. Save on traditional costly calibration and time-consuming processes.



Non-invasive self-administered device that operates in two different modes: Straw and contactless. If tested positive in contactless, the user would be asked to do a straw test.

Operating in two modes,



#### Cloud connectivity and data management system


Streamlining Your Data: Discover Br-LGX-WS Advanced Management Portal using AWS services.



#### Autonomous device with low-cost maintenance

No administrative needed. Save on operation and cost and time on managing people and schedules. No heavy-duty maintenance required.

### **How Breath Logix Works**

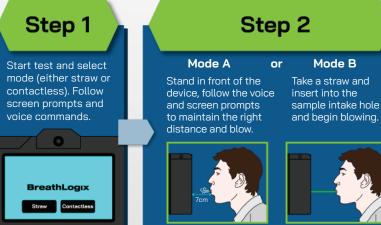

# Step 3

Provide one single continuous blow, until the user is prompted to stop.



# Breath alcohol

Step 4

results (BrAC reading) will appear on the screen in less than 60 seconds.



### **Breath Logix Cartridge Replacement**



Turn device off, use the custom screwdriver to open the screw on the top lid.



Pull up the cartridge holder and remove the old cartridge by lifting it up.



Insert the **new cartridge** in a way that Cannabix logo is faced towards yourself, push it all the way in using the cartridge holder handle.



Put back the top lid, and the screw using the screwdriver.

### **Breath Logix Accessories**



Breath Logix Cartridge



Printer



RFID



Integration Hub



PM 2.5 sensor



Camera



External Memory



Biometrics Scanners

# **Breath Logix Data Flow**



1. Run test and collect samples.



2. Upload data to the cloud, powered by Amazon Web Services (AWS).



3. Centralize and digitize your alcohol testing process using the Breath Logix data analysis.